 



# hyperMILL Export from MachiningCloud

## Export from MachiningCloud


1. In MachiningCloud, select any tool, assembly, job, or other item configuration and select “Export”



 2. In the export dialog, select the option for hyperMILL

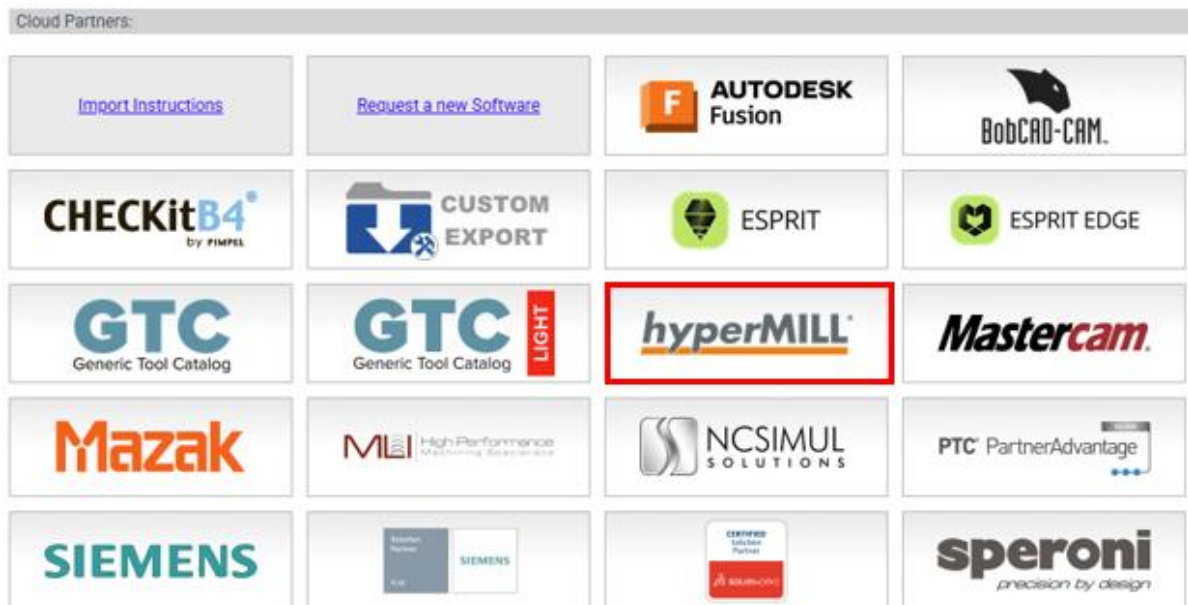


 3. In your notifications, you will see your export available for download. Select “Download File”

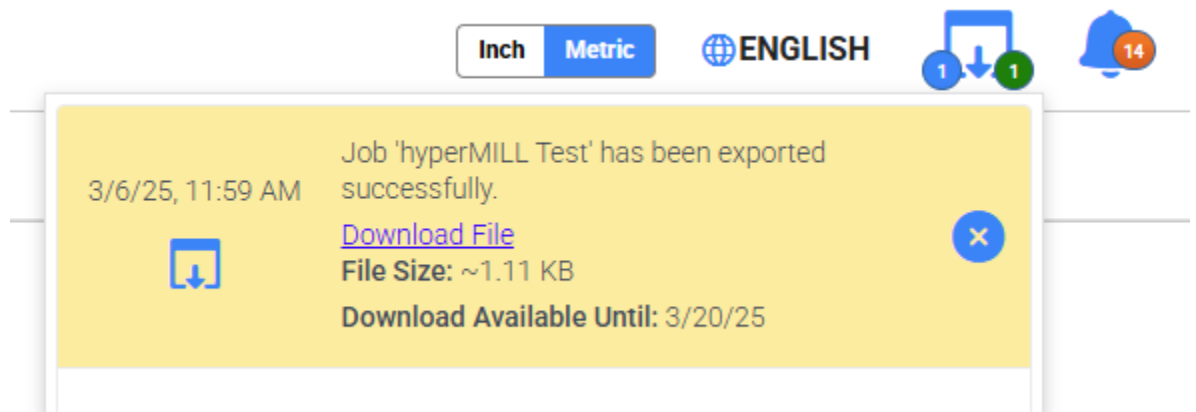

## Import to hyperMILL

 4. Extract the zip file to your desired folder
5. Open your "Tool Database" from hyperMILL
6. Drag and drop the hyperMILL.xml to your tool database

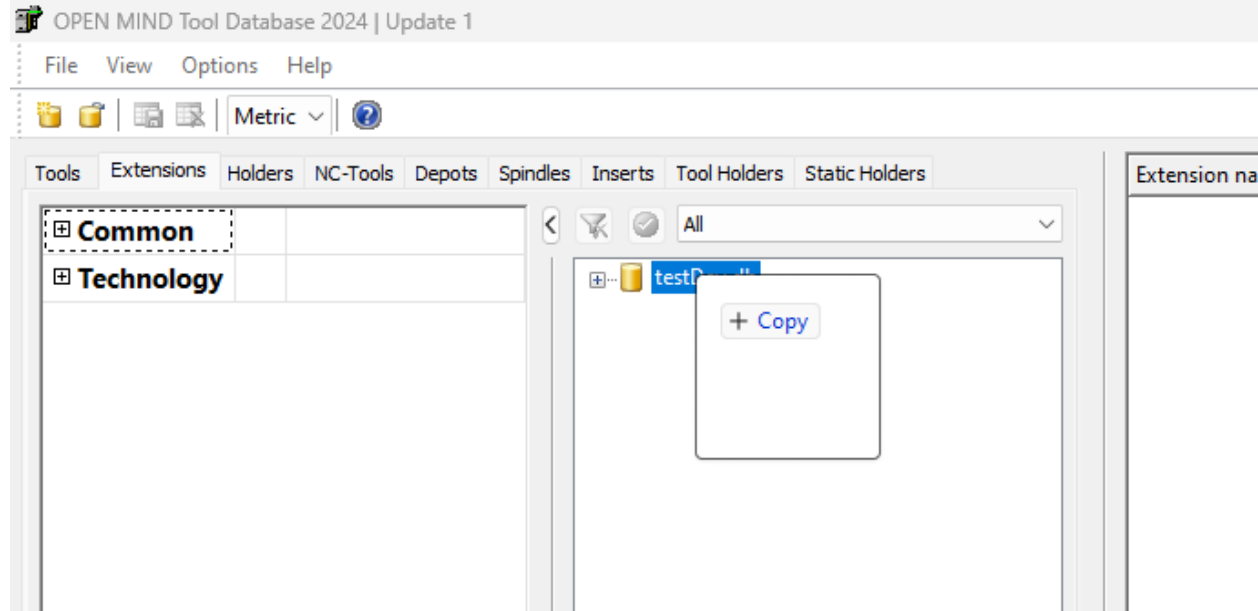

For any questions or concerns, please reach out to [support@machiningcloud.com](mailto:support@machiningcloud.com)